




Lenovo Tab 2 A8 Battery Replacement

Have a defective battery? Learn how to replace it to bring power back to your tablet.

Written By: Carli Ollerman

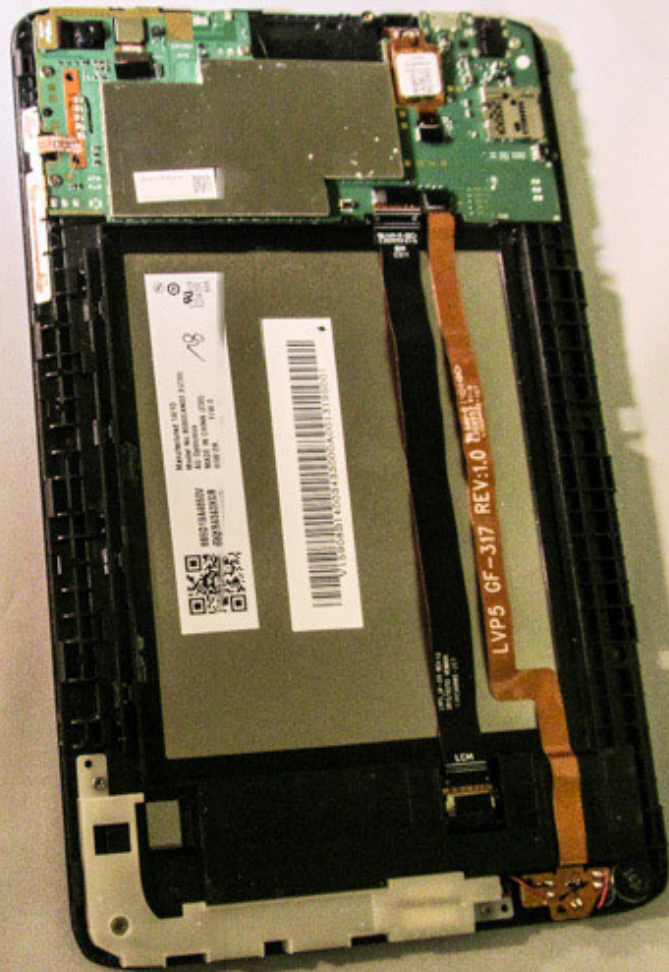

INTRODUCTION

This guide will show you how to safely remove the battery component of your tablet.

TOOLS:

- [Tweezers](#) (1)
 - [Metal Spudger](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Removing the Back Panel





- Place the tablet face down on a soft, stable surface that will protect the screen.
- Next, Scrape off the seal over the screw in the back of the tablet with a Metal Spudger.
- Use the Phillips #000 Screwdriver to remove the M1.4 × 2.5 screw.
 - ⓘ If the seal covering the screw has already been removed, please proceed to the next step in the process.
 - ⓘ As the screw is small, you may wish to extract it using a pair of tweezers.

Step 2



- Starting on the side, work your way around the the tablet to pop off the back cover. You will want to utilize a metal Spudger for this.
 - ⓘ Some force may be required initially to pry the back cover off.
 - ⓘ Note that the button tabs for this device are loose inside the case and will fall out when opening.

Step 3 — Battery

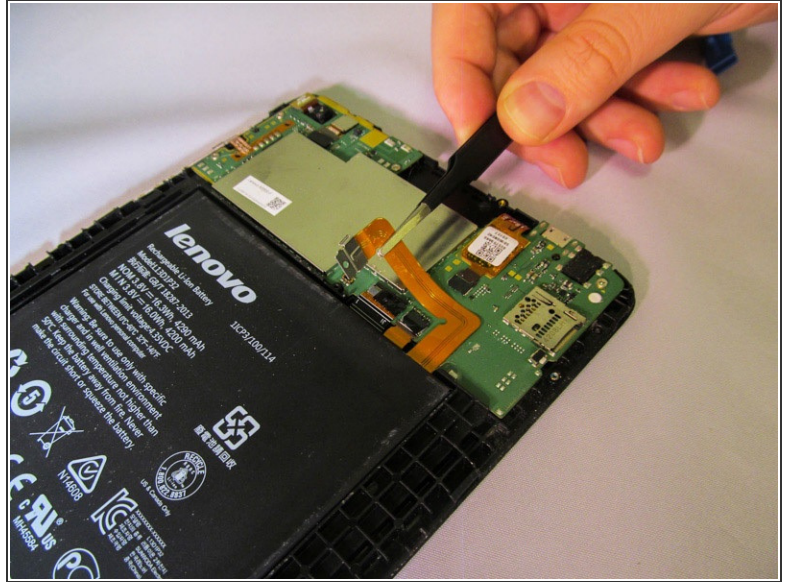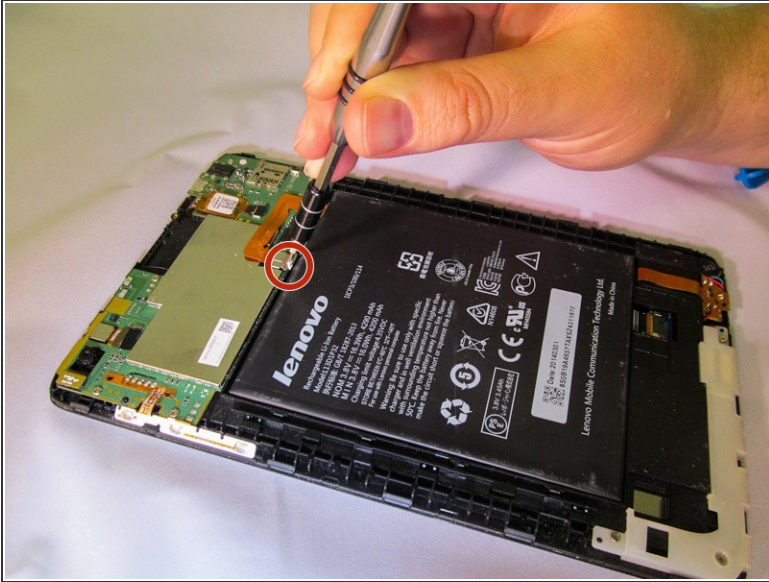

- Using a counterclockwise motion with the Phillips #000 screwdriver, remove the M1.4 × 2.5 screw that holds down the copper strip connected to the battery.
- With a pair of Tweezers, carefully unplug the strip connecting the battery to the motherboard.

Step 4



- Working your way around the edge of the battery, pry out the battery using a plastic opening tool
- ⓘ Be aware that the battery is held in by double-sided tape on the underside

To reassemble your device, follow these instructions in reverse order.

